

3.0 Troubleshooting

- a) **Motherboard does not turn ON.**
Check input cables. Make sure you have a well tightened wire harness. Measure the un-switched pin (red). You should see 12V (car on) or 0V (car off). Note: In P1, P2, P3 modes if V (in) is <12V, the M3-ATX will NOT start.
- b) **Motherboard does not turn ON (continued)**
Ensure the total system power consumption does not exceed the M3-ATX specifications.
- c) **Motherboard is not turning ON (cont.)**
Make sure that the ON/OFF wire harness from the M3-ATX is connected to the ON/OFF switch of your motherboard.

4.0 M2-ATX Characteristics

| | |
|--------------------------------------|---|
| Minimum Input Operating voltage | 6V |
| Maximum input Operating voltage | 24V (clamping will occur at 25-27V) |
| Deep-Discharge shutdown threshold | 11.2V |
| Input current limit (fuse protected) | 15A |
| Max Output Power | 125 Watts |
| Deep Sleep Current Consumption | < 0.5mA |
| Operating temperature | -40 to +65 degrees Celsius |
| Storage temperature | -55 to +125 degrees Celsius |
| MTBF | 150,000 hrs @ 50C, 96,000 hours @ 65C |
| Efficiency (Input 9-16V) | >94%, all rails combined, 50% load. |
| Input connectors | Faston 0.25" terminal |
| Output Connector | ATX Power 20 pin (Molex P/N 39-01-2200) |

*Units start failing at > 125 Celsius. Operating at temperatures above 85C / 185F will drastically reduce the MTBF.

Maximum Power Characteristics

| Output Rail | Current (Max) | Current Peak (<30 seconds) | Regulation |
|-------------|---------------|----------------------------|------------|
| 5V | 6A | 8A | 1.5% |
| 3.3V | 6A | 8A | 1.5% |
| 5VSB | 1.5A | 2A | 1.5% |
| -12V | 0.15A | 0.2A | 10% |
| 12V | 4-6A | 9A | 2% |

When operating at <8V or >16V or extreme temperatures, de-rate by 25-50%. Ventilation will be required.

12V Rail Output Current (buck/boost converter)

| Input (V) | 12V rail current | Input (V) | 12V rail current |
|-----------|------------------|-----------|------------------|
| 6-8V | 4A (6A peak) | 11-16V | 6A (8A peak) |
| 8-11V | 5A (7A peak) | 16-24V | 4A (7A peak) |

M3-ATX Installation Guide

MINI-ITX.COM PART NUMBER: 1853

M3-ATX

6-24V Intelligent Automotive ATX Power Supply

Installation Guide

Version 1.0c

MINI-ITX.COM PART NUMBER: 1853

Before you start...

Please take a moment and read this manual before you install the M3-ATX in your vehicle. Often times, rushing into installing the unit can result in serious damage to your M3-ATX board, computer and probably your car's electrical system.


The M3-ATX board has several wires that need to be installed in various places. When installing, **always double check the polarity** of your wires with a voltmeter.

Avoid using the cigarette plug as a power source, often times the contacts are not capable of delivering high current to your PC.


1.0 Introduction

Thank you for purchasing the M3-ATX power sequencer / vehicle ATX power supply. The M3-ATX was designed to work with a wide variety of main boards such as the VIA mini-ITX motherboards as well as Pentium-M / Celeron or full power Pentium systems.

1.1 M3-ATX Logic and Connection Diagrams

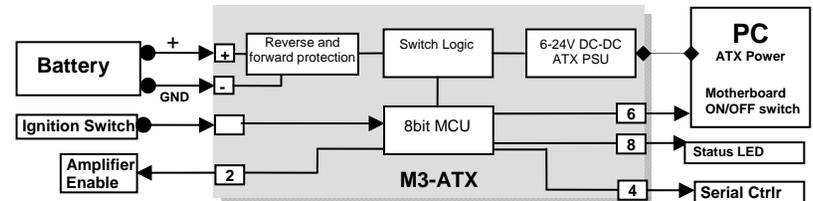

HDD, FLOPPY, SATA POWER ON/OFF, THUMP, SERIAL CABLES V(IN), IGNITION WIRE HARNESS

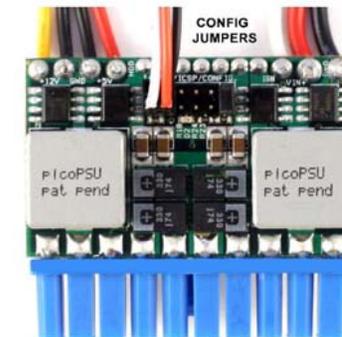

Power Input Connectors (right side)

- Red** Battery + (positive, un-switched battery)
- Black** Battery - (negative)
- White** Ignition (switched battery, positive. Can test by connecting it to Battery +)

Power Output Connectors (left side)

Hard drive wire harness (HDD, SATA-HDD, Floppy)

ON/OFF and THUMP wire harness (connects to M3-ATX pin header)

ON/OFF wire harness (red/black) to connect to motherboard ON/OFF pin headers
THUMP (white) to connect to amplifier remote ON/OFF connector.

| | P | Off-delay | Hard-off |
|---|----|-------------------|----------|
|  | P0 | Standard PSU mode | |
|  | P1 | 5sec | 1 min |
|  | P2 | 1 min | 5 min |
|  | P3 | 30 min | 2 hour |
|  | P4 | custom | custom |



Wire harness for motherboard ON/OFF switch and thump control (optional)



Wire harness for serial connection.

IMPORTANT: Always use the “Hibernate” feature on your PC, never use “Standby”

P0: In this mode, the M3-ATX behaves like a regular ATX power supply.

P1: Sends ON pulse to motherboard when ignition is ON for more than 2 seconds, sends OFF pulse to motherboard 5 seconds after ignition is turned off. Waits another 1 minute and then shuts down 5VSB to conserve battery. In this mode, the M3-ATX consumes less than 0.5mA. This is our recommended setting.

P2: Sends ON pulse to motherboard when ignition is ON for more than 2 seconds, sends OFF pulse to motherboard 60 seconds after ignition is turned off. Waits another 5 minutes and then shuts down 5VSB to conserve battery.

P3: Sends ON pulse to motherboard when ignition is ON for more than 2 seconds, sends OFF pulse to motherboard 30 minutes after ignition is turned off. Waits another 2 hours and then shuts down 5VSB to conserve battery.

P4: Can be set to any value. Setting can be done via an optional serial cable. (Default values for P4 are Off-delay=30sec, Hard-off=30sec)

NOTE: To reset the M3-ATX settings to factory defaults (in case changes were made via the serial uplink), simply power off the unit, connect a jumper as shown and then power back up. The LED light will start to flash rapidly indicating that the factory defaults were loaded.



Don't forget to remove the jumper when done!

1.2 Power challenges in a Vehicle PC

The 5V Standby Problem: One of most difficult tasks of operating a PC in a vehicle is power consumption while the computer is OFF. Even when your computer is OFF, it will still consume about 100mA on the 5V rail. When the computer is in SUSPEND mode, it will consume even more power, because the RAM needs to be powered at all times.

No matter how big your battery is, it will eventually drain your battery if proper actions are not taken.

The M3-ATX addresses these issues by cutting off the 5VSB rail after a pre-defined amount of time (see jumper chart, HARDOFF). During the HARDOFF, if the battery level drops below 11.2V for more than one minute, M3-ATX will shut down and re-activate only when the input voltage is > 12V.

Engine Cranks, under-voltage and over-voltage situations. Another difficult task is maintaining stable 3.3V, 5V, 12V and -12V power to your PC. While car batteries are rated at 12V, they actually provide voltages in between 7-11V (engine cranks) or as high as 80 volts (load dump). Most of the times, your battery will stay at 13.5V (while car is running) but extra precautions need to take place in order to prevent such situations. M3-ATX can operate as low as 6V and as high as 24V while providing strict regulation on all rails along with input voltage clamping and reverse protection.

Loud amplifier pops when PC starts. If your PC is connected to your car amplifier, you will hear a loud pop when the computer is first started. The M3-ATX has an ‘anti-thump’ control that will keep your amp OFF while the PC starts. Simply connect the white wire from your M3-ATX cable harness to your amplifier remote control pin.

2.0 Modes of operation

The M3-ATX performs several timing routines and takes actions as follows:

- 1) Ignition=OFF. Nothing happens. M3-ATX is waiting for ignition signals.
- 2) Ignition=ON. M3-ATX waits for 2-3 seconds then turns on the 5Vsb rail. After another second M3-ATX sends an “ON” signal to the motherboard via the 2 wires connected to the motherboard ON/OFF pins. The motherboard will turn ON and your system should start booting.
- 3) Ignition=ON during driving. Your computer will remain ON.
- 4) Ignition=OFF. M3-ATX waits for “OFFDELAY” in seconds (see jumper chart) and then it turns the motherboard OFF by sending a signal to the motherboard ON/OFF switch. Your computer should turn off gracefully (shutdown procedure). During this time, power will still be available for your PC to perform shutdown. 5VSB will still be provided for another “HARDOFF” seconds (see jumper chart). In the event where the shutdown process is longer than “HARDOFF” (windows gets frozen, etc), power will be shut down hard, turning off all power rails. If “HARDOFF” is set to ‘NEVER’, the PSU will always provide 5VSB, therefore the PC can also be used in SLEEP mode. During the HARDOFF procedure, the battery levels will be constantly monitored to prevent deep discharge situations.
- 5) M3-ATX will go to step 1, if ignition is tuned ON again.

Note: When all config jumpers are removed, the M3-ATX acts as a regular power supply, with no ignition timing, no HARDOFF. The M3-ATX will send an “ON” pulse to the motherboard when the power is applied for the first time. Do not connect the on/off switch if you don't want your PC to be started automatically.